

INSTALLATION INSTRUCTIONS FOR EXH215 81/82 EXHAUST MOUNTING HARDWARE

Place your HONDA CBX on the Center Stand and support the Swingarm or Rear Wheel so that it stays in place when you remove the Suspension Bolt.

Installing Sidestand Stop

1. Remove the stock bolt from the left front Suspension Pivot.
2. Insert the 10x65mm Hex Bolt through a 10mm Washer and then through the Sidestand Stop as shown in Fig. 1. Attach a 10mm Washer and Locknut and snug them but do not tighten. Align the Sidestand Stop so that it is properly positioned and then torque the Nut and Bolt to 30 ft.lbs.

Installing Centerstand Stop

1. Remove the Stock Bolt from the right front Suspension Pivot.
2. Insert the 10x70mm Hex Bolt through a 10mm Washer and then through the Suspension Pivot. Attach a 10mm Hex Nut (not the Locknut) and torque to 30 ft.lbs. Attach the Centerstand Stop (Fig. 2) with a 10mm Washer and Locknut, Torque to 30 ft.lbs.

Fig. 1

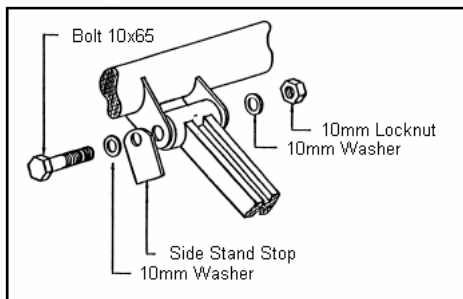


Fig. 2

